
## **DEUTSCH HDP20** PART NUMBERING SYSTEM

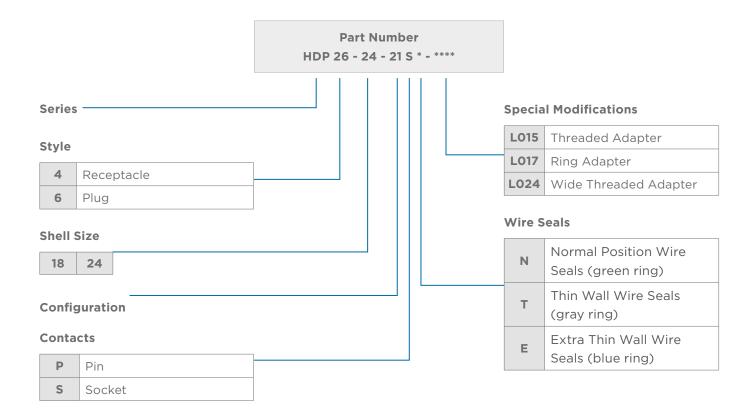

## helpful hint

Making the socket contact side the "hot side" can reduce the danger of electric shock.





PAGE 12 TE.COM/ICT